



INTRODUCTION:

CONFETTI FLOW is the small blowing machine thought to provide a continuous shooting effect of confetti, snow, or even streamers on your stages or indoor events.

Ideally for carnival floats or similar, it shoots any kind of confetti or streamers at almost 10 meters ! You can also throw some kind of sweets or other small gadgets.

Key features:



- Long Range: almost 10 meters shooting distance with rectangular confetti!
- Very low consumption (900 W) with a high performance
- Extremely easy operating system. Just plug in a 220-240V. socket, and ready to use
- Flexibility: The machine can work either from the ground, fixed to a wall or even hung on truss or a speaker stand thanks to its multiple anchor points.
- You can connect a vacuum hose to blow your confetti, streamers, or other small gadgets.
- Handy: Only 12 kgs and 67x34x20 cm. (the whole set inside the nylon bag)

Accessories:

The Confetti Flow is delivered with a heavy duty nylon carry bag for an easy transportation and protection.

We also have available a round base stand adaptor to fix it on a speaker stand.

Range charts (tests made indoor without draught):

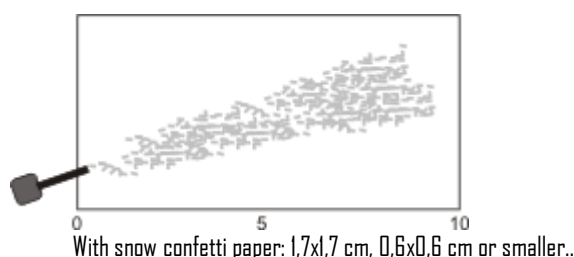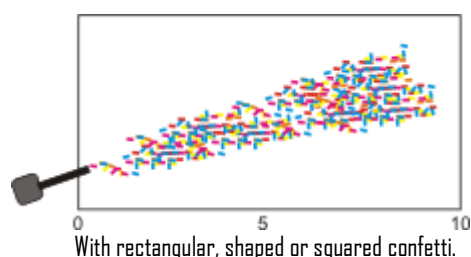

OPERATION:

Place the CONFETTI FLOW machine in a safe place to blow with space enough for the confetti does not impact against anything or anyone.

The machine can work placed on the floor, hung on a tripod speaker, or even hung on a truss by a clamp and safety cable.

1. Screw the black metal tube provided to the Confetti Flow machine and point the tube to the desired angle and direction
2. Plug the machine to a 220-240V. socket.
3. Turn ON the machine by its switch.
- 4/A. Insert regularly by hand the confetti, snow or streamers into the metal tube through its Y shaped tube and it will be blown automatically through the tube
- 4/B. You can also use the provided extension hose and place the confetti paper or snow paper into a box/carton next to the machine. Thus, the hose will suck the confetti or snow paper from the box just as it was a vacuum cleaner. You must be aware to don't suck too much confetti paper at once since you risk to stuck/obstruct the tube or to blow more confetti than desired.

3/B. Control option B (DMX controlled with a dimmer)

- i. Connect the plug of the Confetti Flow machine to the Dimmer
- ii. give 100% power to the DMX to blow the confetti paper or snow. You can alternatively give less power to your DMX to reach different lengths.

CAUTION:

Don't wet the Confetti Flow machine and keep it on a dry place between 0 and 40°C.
Keep it away from children

TECHNICAL DATA

VOLTAGE IN: 220-240V AC. 50 HZ

NOMINAL POWER: 900 W

FUSE: 5A

WEIGHT: 6.25 Kgs

Dimensions: 67x34x20 cm. (the whole set inside the nylon bag)